

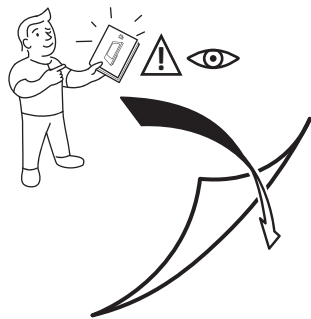
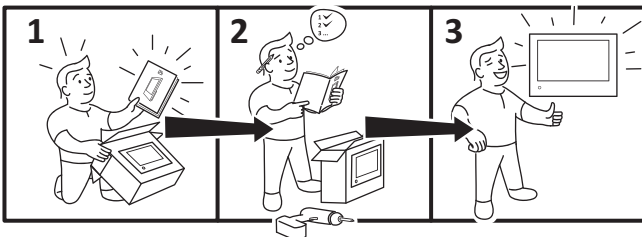
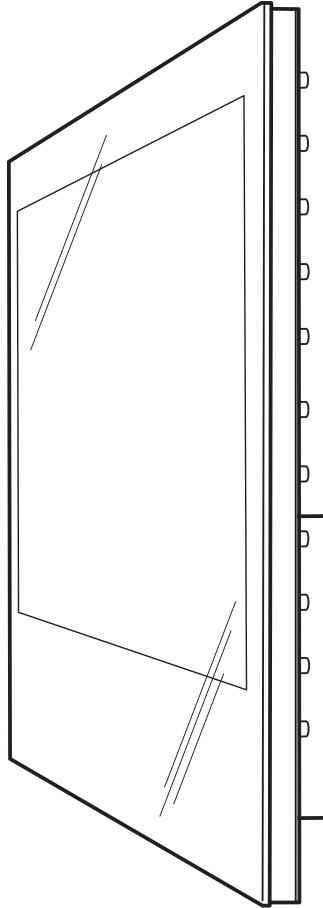
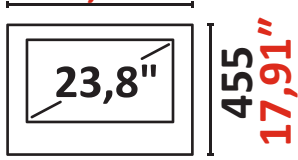
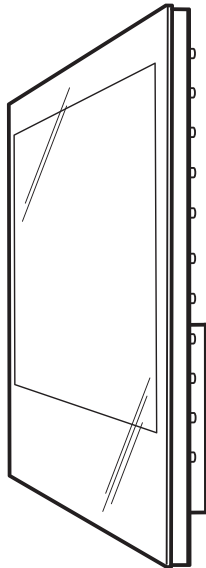


594
23,39"

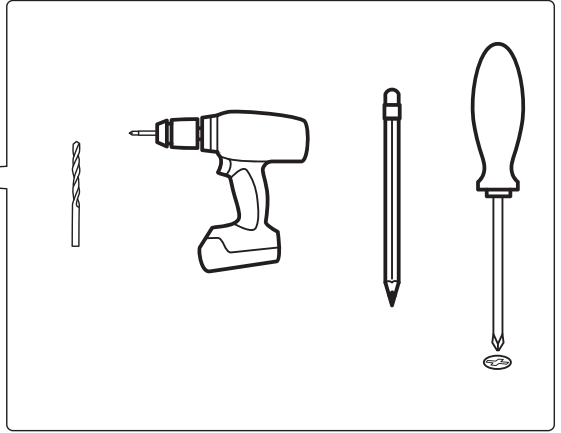

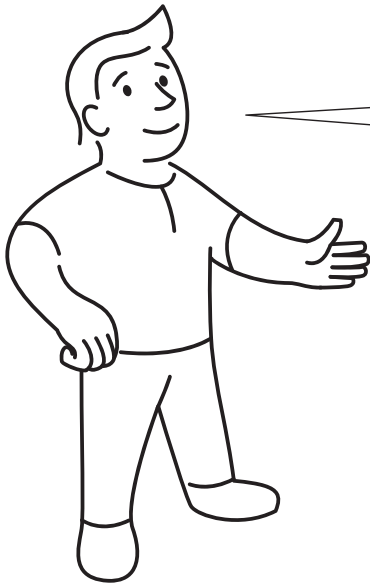

x8

A1

blum

DTC



x8

A2

KESSEBÖHMER

HÄFELE





x4

B




1

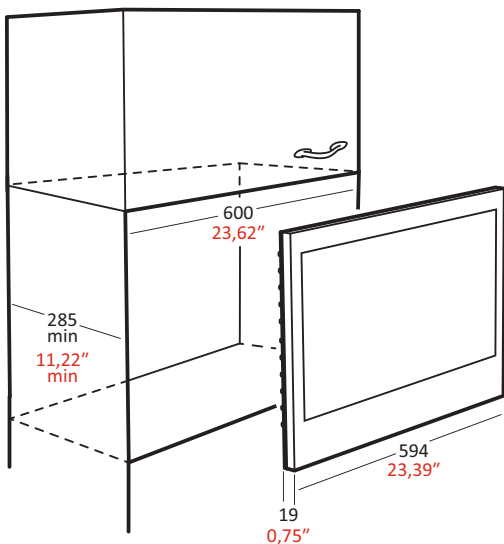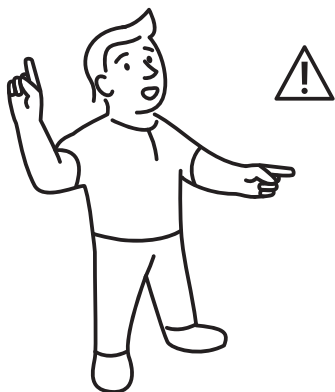


2



A

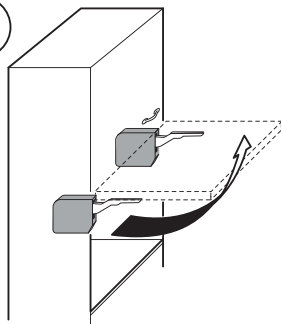

B

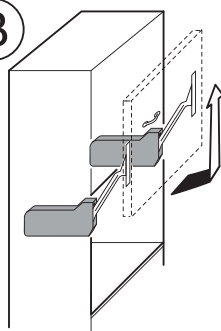

1

blum
Aventos HK29

DTC
DTC TOP STAY SF
SF00AH02A

2

blum
Aventos HK TOP29

KESSEBÖHMER
FREEflap forte-F

3

HÄFELE
Free Flap 3.15 F

1

blum
Aventos HL27/38

2

KESSEBÖHMER
FREESlide Q4us






A1




blum

Aventos HK29

DTC
Global Quality Benchmark

DTC TOP STAY SF

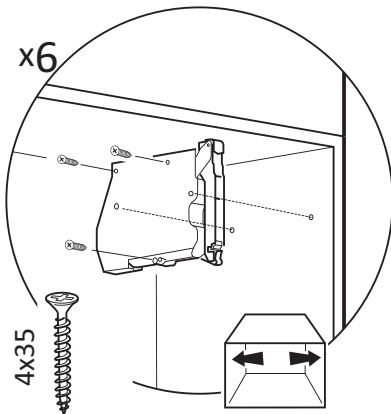
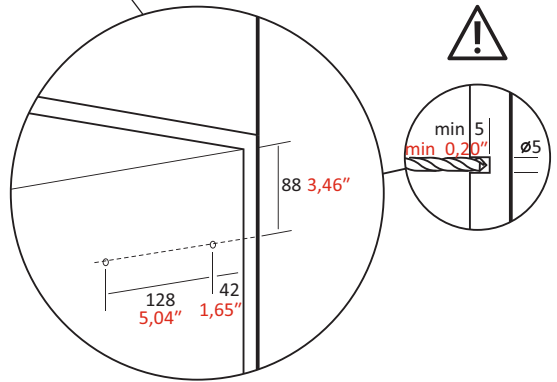
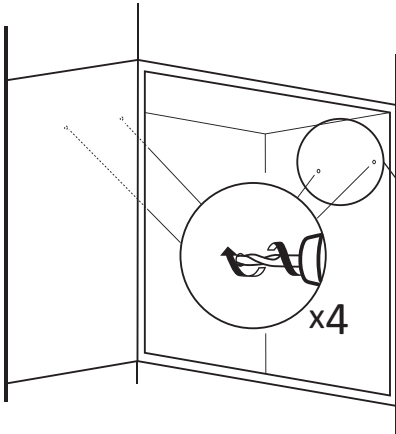


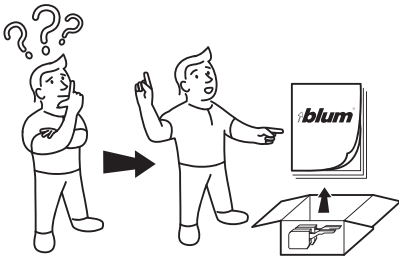
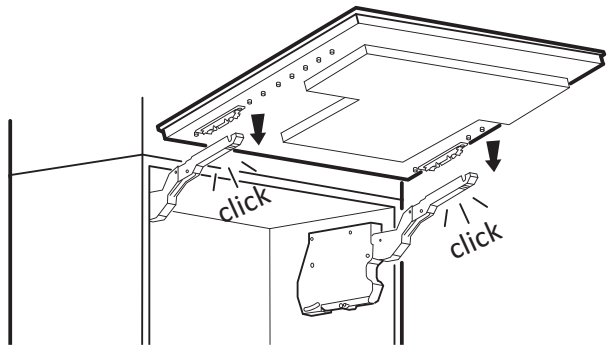
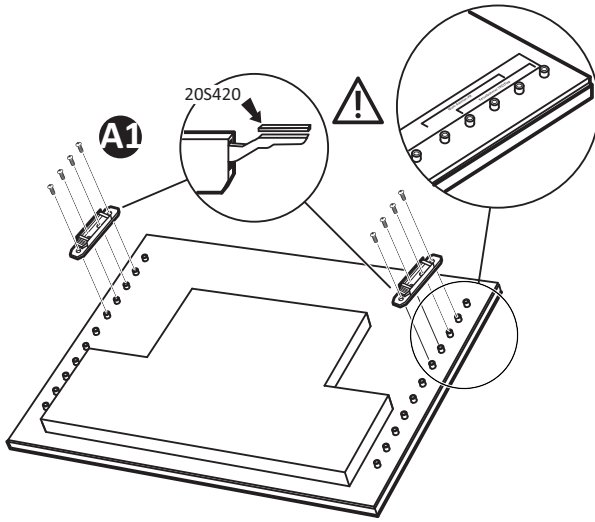


A2

blum

Aventos HK TOP29

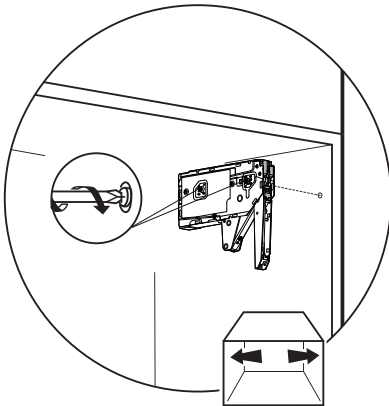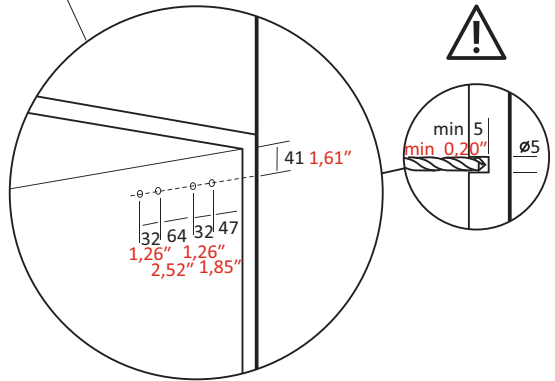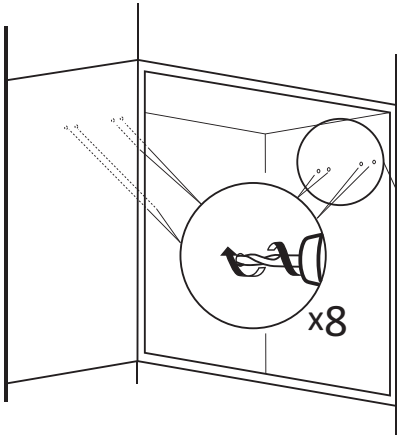


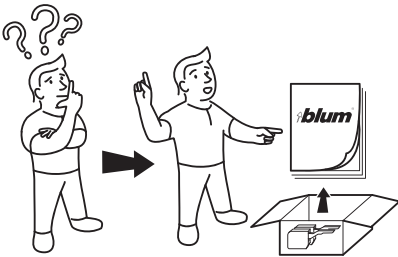
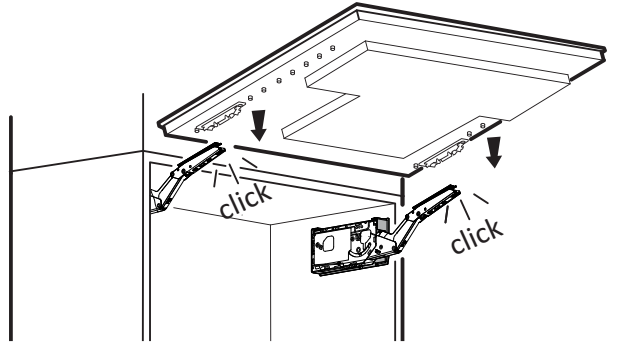
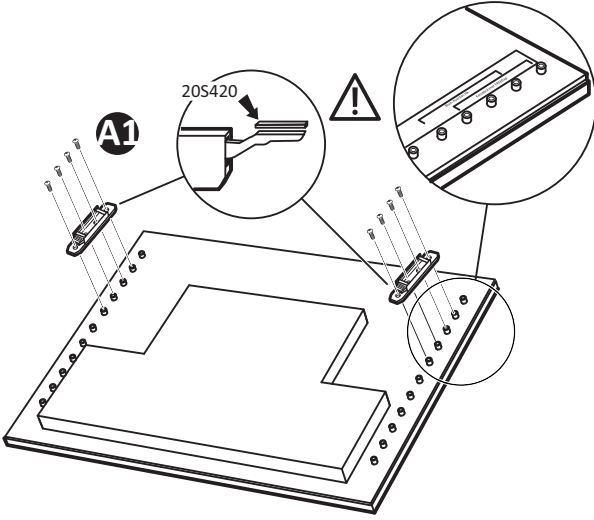


A3

KESSEBÖHMER
FREEflap forte-F

HÄFELE
Free Flap 3.15 F



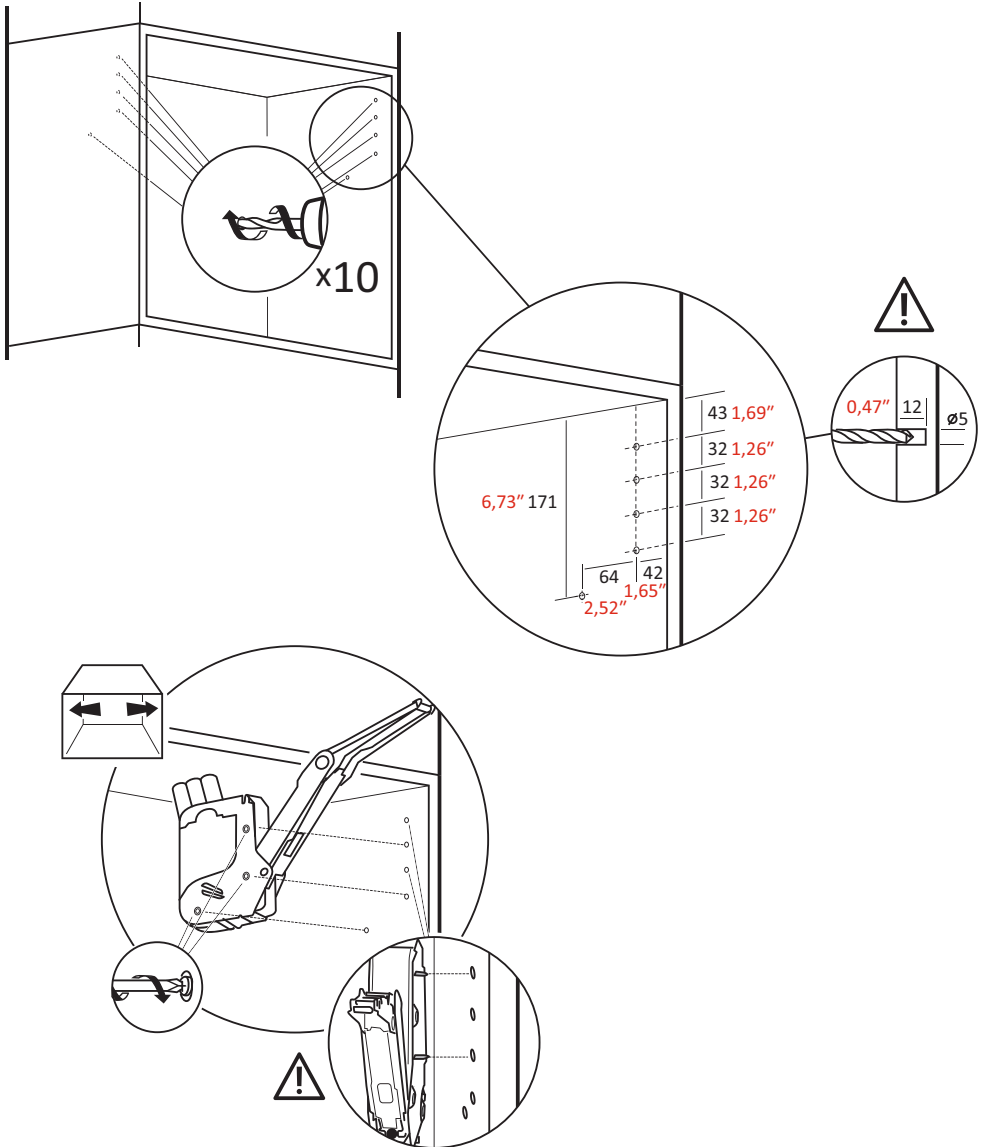



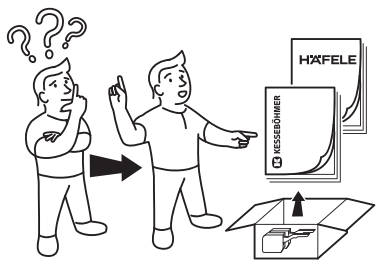
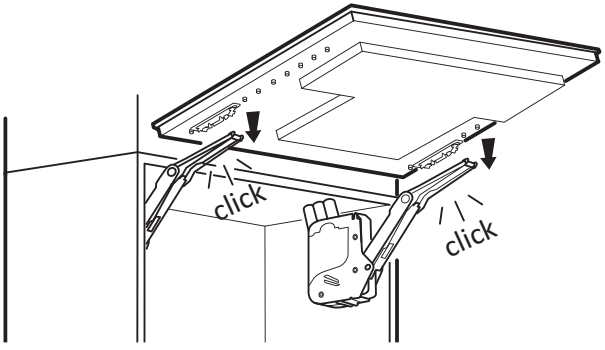
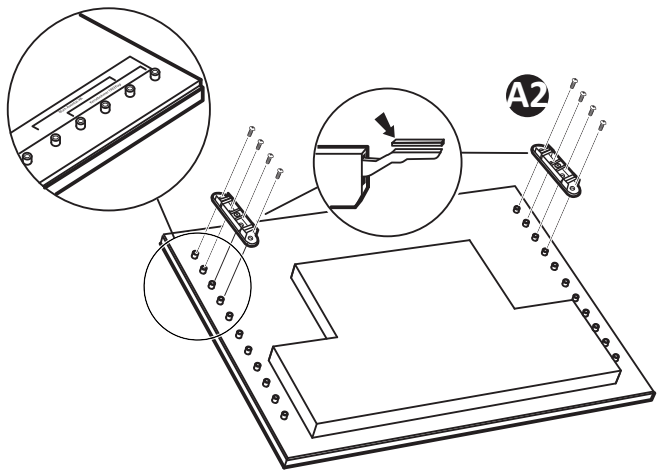


B1

↑ blum®

Aventos HL27/38

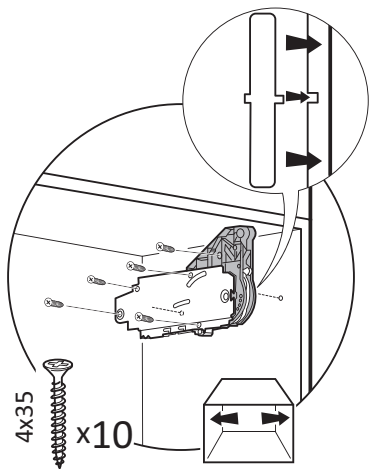
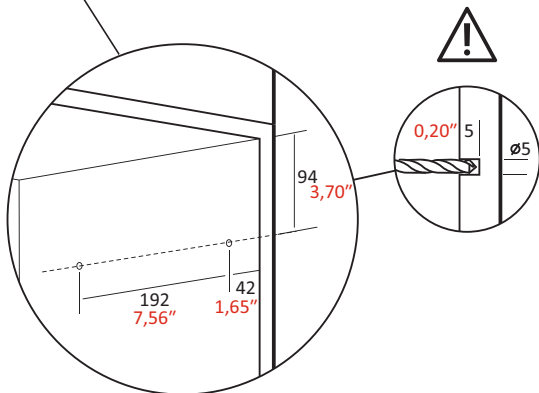
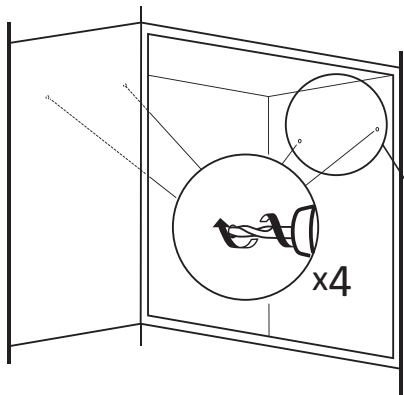


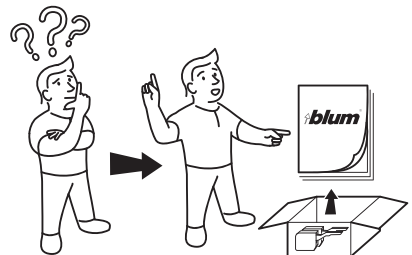
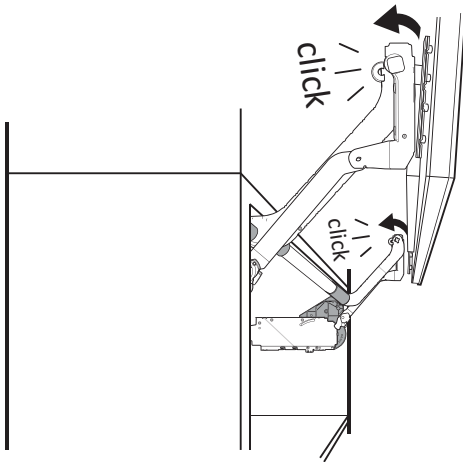
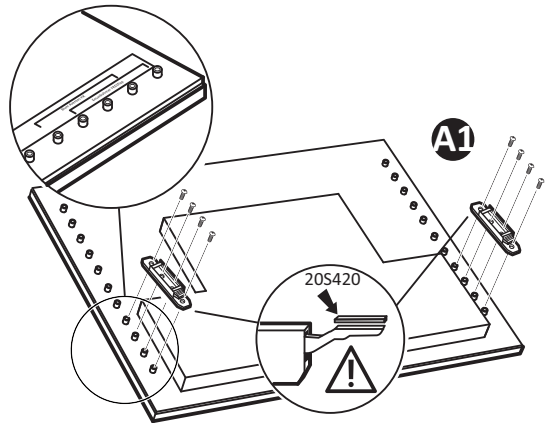
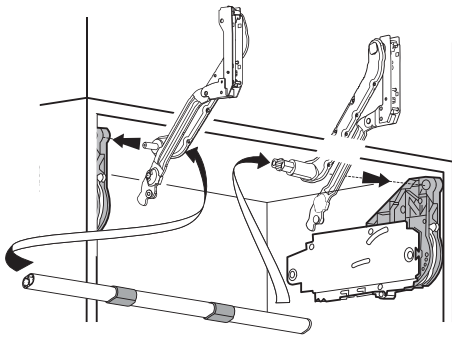


B2

KESSEBÖHMER
FREEslide Q4us

HÄFELE
Free Up Q4us

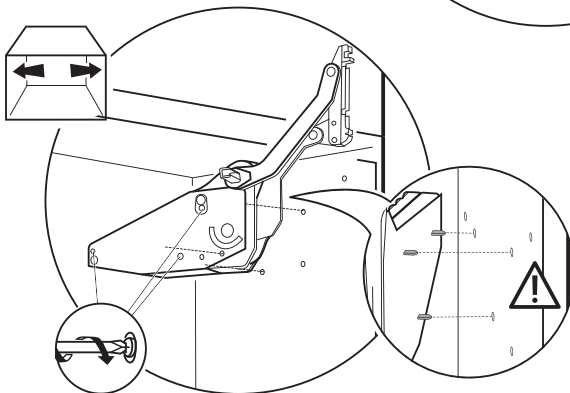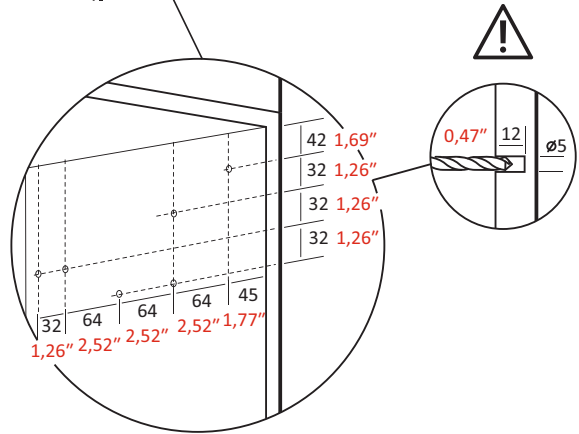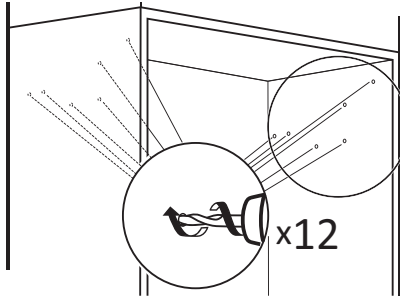


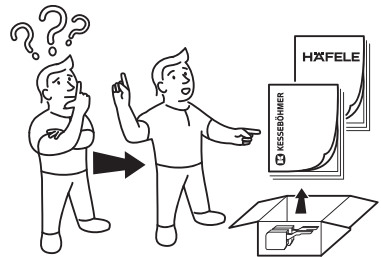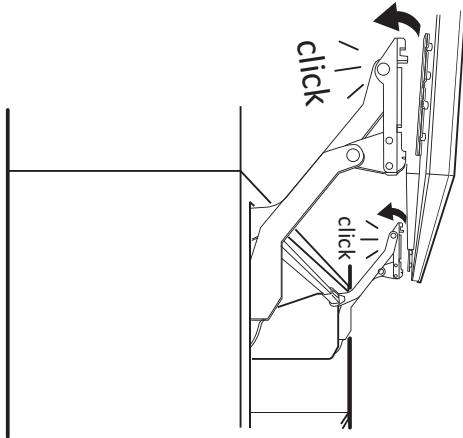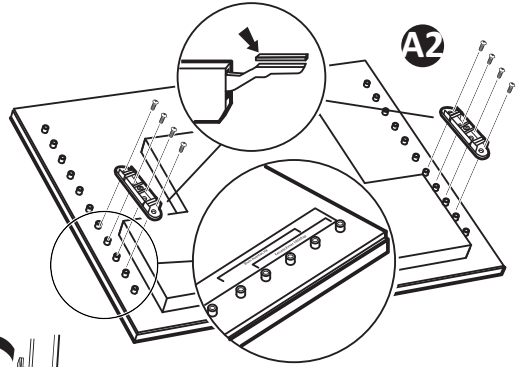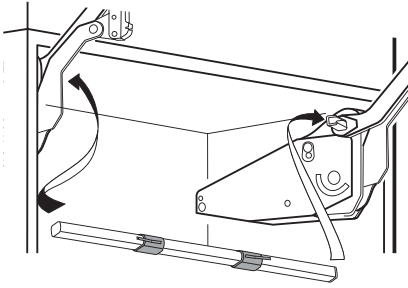


3




A

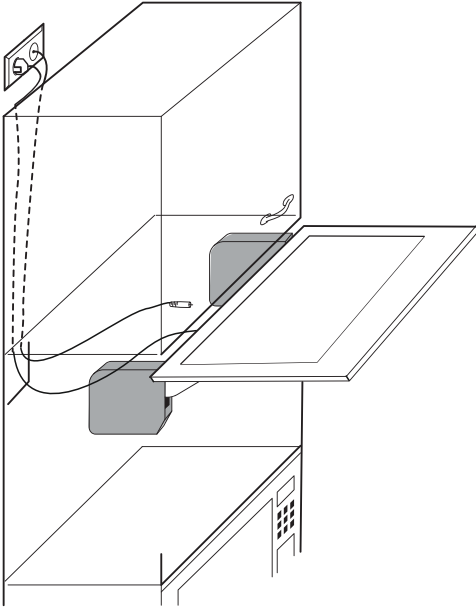




B

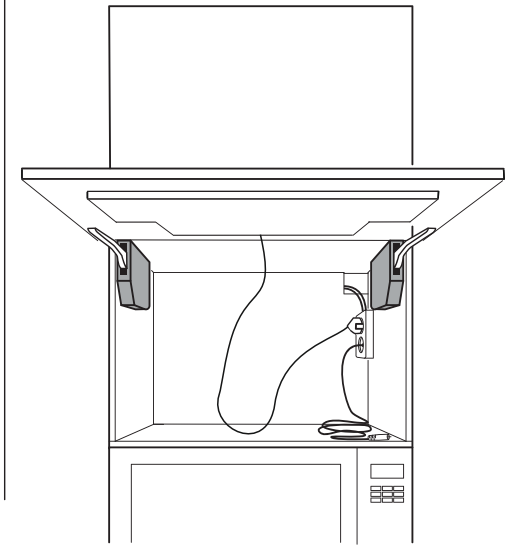



4

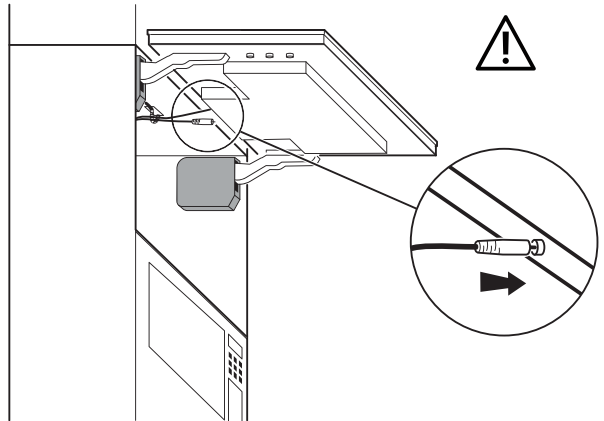

5

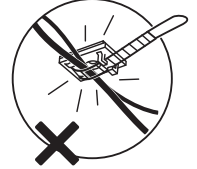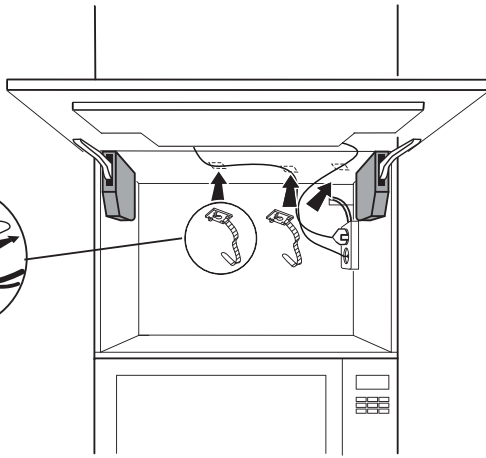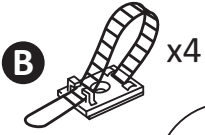

6

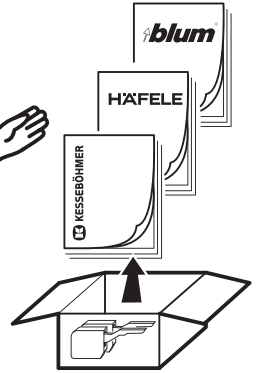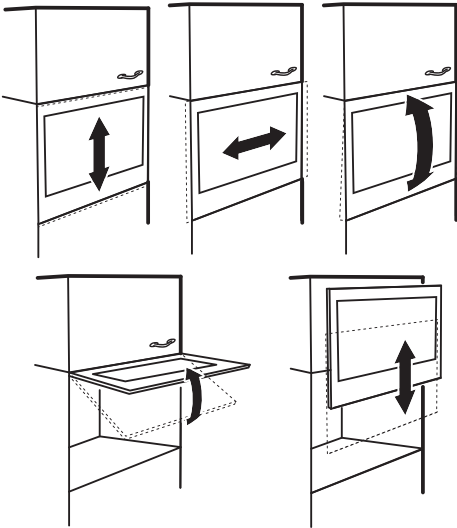

7

